



INSTALLATION AND MAINTENANCE INSTRUCTIONS
DIVERTER VALVE TYPE K

Britton Valves
Kynochs, Bideford
Devon, EX39 4DT

Tel: 01237 477465
Fax: 01237 421459

E-Mail: post@britton.dowsongroup.com
www.dowsongroup.com

Note: These valves are designed and supplied for incorporation with other equipment.

Warning: Ensure that any part of body is kept clear of valve internals at all times during operation, testing and servicing.

Ensure mating flanges are flat. A soft gasket such as rubber should be used to take up irregularities in flanges with uneven surfaces. Valve must be mounted with the inlet flange horizontal.

Valves are tested at the works and should not need any adjustment.

Air supply should be approximately 5 Bar and free from moisture. Ensure the nylon piping is not kinked. The standard solenoid valve supplied is a single solenoid type.

MAINTENANCE

Should the rubber seal need replacing at any time, then the valve should be removed from the line and the flap taken out and separated. It is advisable to use new screws to re-assemble and to Loctite in position.

NOTE: ISOLATE AIR AND ELECTRICITY SUPPLY BEFORE WORKING ON VALVE.

REPLACEMENTS -

(a) Pneumatic Actuator seals can be replaced when worn and are available in kit form.

January 2002

THE DOWSON GROUP

www.dowsongroup.com

BRITTON VALVES

DOWSON HANDLING

HELI-TEC

PROCOL

WRIGHTS



Company Registration Number 709486 England
